smeg

Libretto di Istruzioni
Instructions Manual
Manuel d'Instructions
Bedienungsanleitung
Gebruiksaanwijzing
Manual de instrucciones
Manual de Instruções
Руководство по эксплуатации
Bruksanvisning

KSEI62

INDICE

IT

CONSIGLI E SUGGERIMENTI 4
CARATTERISTICHE 5
INSTALLAZIONE 6
USO 8
MANUTENZIONE 9

INDEX

EN

RECOMMENDATIONS AND SUGGESTIONS 10
CHARACTERISTICS 11
INSTALLATION 12
USE 14
MAINTENANCE 15

SOMMAIRE

FR

CONSEILS ET SUGGESTIONS 16
CARACTERISTIQUES 17
INSTALLATION 18
UTILISATION 20
ENTRETIEN 21

INHALTSVERZEICHNIS

DE

EMPFEHLUNGEN UND HINWEISE 22
CHARAKTERISTIKEN 23
MONTAGE 24
BEDIENUNG 26
WARTUNG 27

INHOUDSOPGAVE

NL

ADVIEZEN EN SUGGESTIES 28
EIGENSCHAPPEN 29
INSTALLATIE 30
GEBRUIK 32
ONDERHOUD 33

ÍNDICE

ES

CONSEJOS Y SUGERENCIAS 34
CARACTERÍSTICAS 35
INSTALACIÓN 36
USO 38
MANTENIMIENTO 39

ÍNDICE

PT

CONSELHOS E SUGESTÕES 40
CARACTERÍSTICAS 41
INSTALAÇÃO 42
UTILIZAÇÃO 44
MANUTENÇÃO 45

УКАЗАТЕЛЬ

RU

СОВЕТЫ И РЕКОМЕНДАЦИИ 46
ХАРАКТЕРИСТИКИ 47
УСТАНОВКА 48
ЭКСПЛУАТАЦИЯ 50
УХОД 51

INNEHÅLL

SE

REKOMMENDATIONER OCH TIPS 52
EGENSKAPER 53
INSTALLATION 54
ANVÄNDING 56
UNDERHÅLL 57

RECOMMENDATIONS AND SUGGESTIONS

⚠ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

INSTALLATION

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
  Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.

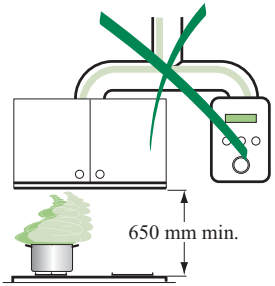

USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambè under the range hood; risk of fire
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

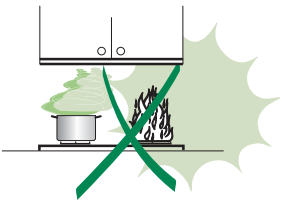

MAINTENANCE

- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CHARACTERISTICS

Dimensions

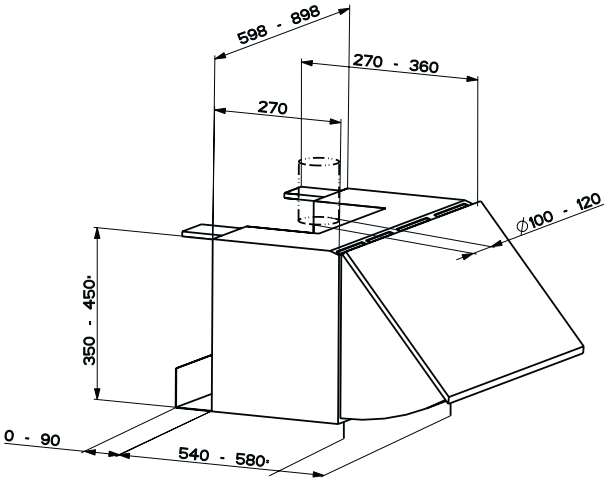

Components

Ref.	Q.ty	Product Components
1	1	Hood Body, complete with :Controls, Light, Blower, Filters
9	1	Flange ø120 mm

Ref.	Q.ty	Installation Components
7.2	2	Hood Body Fixing Brackets
7.3	2	Safety Squares
11	6	Wall Plugs
12a	6	Screws

	Q.ty	Documentation
	1	Instruction Manual

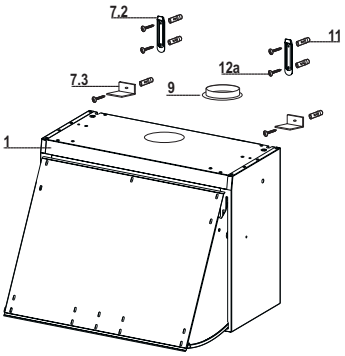

INSTALLATION

FIXING OF THE FRONTAL PANEL TO THE VISOR

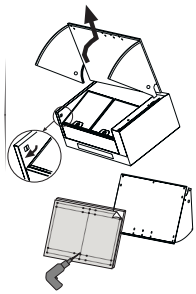

- Pull out the metal visor and, at the same time, unlock the lever on the left side of the hood.
- Use the cardboard template when drilling the front panel. Fix the panel to the visor using the screws supplied.

FIXING OF THE HOOD TO THE WALL

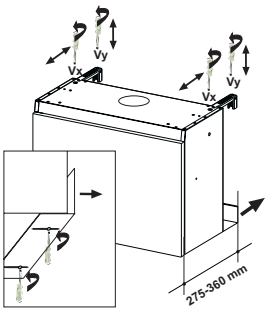

- Hood depth can vary from 275 to 360 mm.
- Regulate the **Vx** screws when adjusting the brackets to the right depth.
- When adjusting the lower part of the hood to the requested depth it is necessary to loose the screws of the metal distance piece and to move it as much as necessary.
- Use the specific cardboard template when drilling the holes into the wall. Put the dowels into the holes and fix the two metal brackets using the four screws supplied together with other accessories.
- Use the specific cardboard template when drillig the side closets.

When the hood is used in ducting version it is necessary to remove the grid from the air outlet.

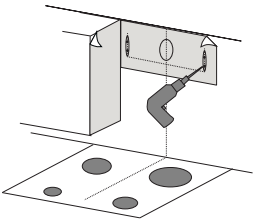

- Hang the hood on the metal brackets.
- Put back the visor again paying attention that the runners are put correctly into the proper places. Adjust the visor sliding by means of the two screws.
- Regulating the **Vy** screws it is possible to align the hood height compared to the closets.
- When necessary adjust again the hood depth.

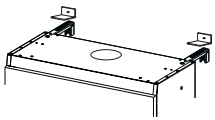

- Place the safety squares above the fixing brackets.
- Mark the midpoint of the holes.
- Drill the wall and fix the safety squares together with screws and dowels (supplied).

Connections

DUCTED VERSION AIR EXHAUST SYSTEM

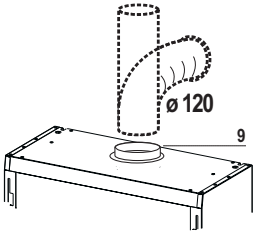

When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe ø120 mm, the choice of which is left to the installer.

- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any activated charcoal filters.

AIR OUTLET IN RECYCLING VERSION

- Make sure that the hood body has been completely fixed.
- Make sure that hood is equipped with charcoal filters.

ELECTRICAL CONNECTION

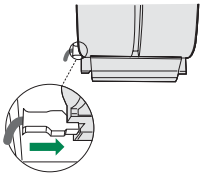

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

Control board

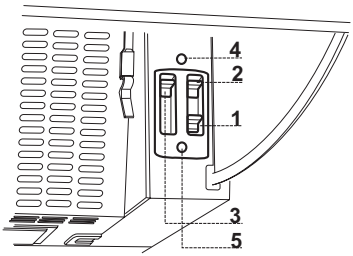

1	Lighting	On/off lighting system.
2	Motor	On/off motor.
3	Speed	Speed control:
		1. Minimum speed, particularly silent, continuous air exchange, suitable in presence of only few cooking vapours and odours.
		2. Medium speed, due to an optimum relation between hood extraction capacity and the noise level, it is suitable for most of the cooking conditions.
		3. Maximum speed, suitable for the cooking conditions when vapours and smells are of the utmost emission even for a longer time.

OPTIONAL

4	Microswitch	Microswitch, which is activated by the movement of the visor. It switches on and off the hood basing on the conditions which have been earlier established with the sliders of the control panel.
5	Led	Led indicating when the motor is on.

MAINTENANCE

METAL GREASE FILTERS

The metal grease filters should be cleaned every two months with normal usage and can be cleaned in a dishwasher or by hand using a mild detergent or liquid soap.

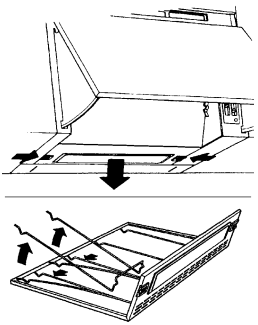

Removal

- Open the metal grille pushing the knobs towards the centre while pulling downwards.
- Remove the wire clips and remove the filters.

CHARCOAL FILTER

In the recycling mode the charcoal filter absorbs smells and odours. The charcoal filter cannot be cleaned and should be replaced at least every six months or more frequently if the hood is used consistently.
To replace the charcoal filter, support the filter with one hand, remove the round disk through the centre of the charcoal filter and rotate it till the filter will come away .
Replace by reversing the operation.

WARNING! It is a possible fire hazard if the filters are not cleaned and replaced as recommended.

Lighting

LIGHT REPLACEMENT

40 W incandescent light.

- Remove the metal grease filters.
- Unscrew the bulbs and replace them with new ones having the same characteristics.
- Replace the metal grease filters.